

Leaks at Pump

Items to check:

1. Pump seal or seal plate o-ring is leaking (Call for repairs).
2. Leak at hair and lint lid. Remove and clean "O-Ring", pump and lid seat.
3. Leak at plumbing (Call for repairs).