

Actuator Valve noisy (“rattling”)

Items to check:

1. Worn valve parts (Call for repairs.)
2. Air in system (Check for leaks.)