

Heater will not come on when pump is running

Items to check:

1. Check heater on/off switch.
2. Check heater thermostat.
3. Check system pressure (Should be normal).
4. If the above 3 items are okay, call for repair.
5. Heater bypass closed.
6. If propane, are tanks full?
7. Is filter system on and running?